



[Optional] Authors of this revision, include prior authors if minor revisions
Dr. Brian Kopp PhD

NMRA Recommended Practice	
Locomotive and Tender Drawbars	
Jul 17, 2025 Aug 21, 2026	RP-37 Draft

1 General

1.1 Introduction and Intended Use (Informative)

This Recommended Practice (RP) explains the specifications and relationships that are recommended for implementing a drawbar between a locomotive and a tender. Both the drawbar itself and attachment methods, often referred to as pins or screws, are discussed. Drawbar electrical issues related to both DC and DCC operation are also explained.

The technological advances in model railroading have created opportunities to improve how drawbars are implemented. While traditional fixed structural drawbars are a significant part of this RP, in order to accommodate the recent improvements in drawbar design, a new alternative approach based on locomotive performance that gives the designer the freedom to create an original drawbar design is also included in Section 5.

In this current version of the document dimensions for HO and TT scales are presented with an accuracy of 0.001" and 0.025 mm, unless otherwise noted. The tolerance for all dimensions, unless otherwise noted is +/- 0.005" or +/- 0.125 mm. Other scales are not addressed in the current version of this RP.

1.2 References

This standard should be interpreted in the context of the following NMRA Standards, Technical Notes, and Technical Information.

1.2.1 Normative

- S-9.1 DCC Electrical Standard
- S-9.2 DCC Communication Standard

1.2.2 Informative

- None

1.3 Terminology

Term	Definition
CC	Drawbar Hole Center-to-Center Dimension
DC	Direct Current
DCC	Digital Command and Control
DD	Drawbar Hole Diameter
DH	Drawbar Height Above Rail

Commented [BK1]: The original RPs used imperial fractions including some really fine ones like 23/64" (0.359375"). This version is converted to decimal, except for one fraction hex wrench dimension.

Commented [Ma2R1]: I agree. It should be decimal. Older docs used fractional inches. Manufacturing and Inspections are now with digital calipers in decimal inches.

Commented [Ma3]: Brian, I suggest adding any new or unique terms about drawbars.

Commented [BK4R3]: I think all the drawbar items have been added

DP-4	Drawbar Projection (Distance between rear of locomotive and tender mount) for 4 wheel tender
DP-6	Drawbar Projection (Distance between rear of locomotive and tender mount)) for 6 wheel tender
DP-Cent	Drawbar Projection (Distance between rear of locomotive and tender mount)) for centipede tender
DT	Drawbar Thickness
DW	Drawbar Width
FH	Height of Tender Floor Underside Above Rail
PC	Metal Tender Pin Clearance Above Rail
PD	Metal Tender Pin Diameter
PF	Metal Tender Pin Flange Diameter
PL	Metal Tender Pin Length
PM	Metal Tender Pin Mounting Length
PT	Metal Tender Pin Length of Taper
RP	Recommended Practice
TS-4	Tender setback (distance between front of tender and mount point) For 4-Wheel Tender
TS-6	Tender setback (distance between front of tender and mount point) For 6-Wheel Tender
TS-Cent	Tender setback (distance between front of tender and mount point) For Centipede Tender
WD	Drawbar Spring Wire Diameter

Table of Contents

1	General	1
1.1	Introduction and Intended Use (Informative)	1
1.2	References	1
1.2.1	Normative	1
1.2.2	Informative	1
1.3	Terminology	1
2	Traditional Drawbars.....	3
2.1	Metal Drawbars	4
2.2	Plastic Drawbars	45
2.3	Drawbar Captivity	45
2.4	Drawbar Locomotive Weighting	6
3	Traditional Drawbar Attachments	6

	3.1	Metal Attachments.....	6
40	3.2	Plastic Attachments	8
	4	Traditional Drawbar and Attachment Relationship	8
	5	Performance-Based Drawbar Designs	9
	6	Electrical Considerations.....	9
	6.1	DC Operation	9
45	6.2	DCC Operation	10
	7	Document History	11

2 Traditional Drawbars

For model railroad locomotive configurations that include a tender, a drawbar is the device that provides the necessary pivoting mechanical interconnection ~~between the locomotive and tender~~. When a metal drawbar is used, it may also provide electrical connectivity for some configurations.

Traditionally, the drawbar has been considered a permanent component of the locomotive and its attachment method to the locomotive is not specified in this RP. In addition, historically, drawbars were in almost all cases made of metal. This however is no longer the case as plastic drawbars are now very popular.

When metal drawbars are employed with metal frame locomotives, the conventional locomotive attachment method is to use a spring-loaded screw or bolt, insulated from the locomotive frame. The spring permits rotation while maintaining electrical conductivity with the screw or bolt. An electrical lug is wired to the screw or bolt for conductivity within the locomotive. The drawbar must always be free to rotate on its locomotive attachment through a limited arc that allows the tender to pivot with the locomotive on curved track.

Since each locomotive differs in its drawbar attachment details, this RP specifies only the height of the drawbar above railhead, its general size, and its projection beyond the floor of the locomotive cab. This projection will vary, dependent upon the type of tender truck and location under the tender of the mating pivot drawbar attachment point.

Changing tender trucks from one type to another, e.g., from four wheel to six wheel, with no change in bolster location, requires no change in drawbar or tender attachment location, but if the change entails relocating the bolster, both the drawbar projection and the tender attachment location should change accordingly in order to maintain constant spacing between locomotive and tender.

A locomotive backing against its tender ~~through~~ the mechanical interconnection of the drawbar introduces a skewing action that throws the engine and its tender out of line with each other. The load of a train behind the tender accentuates this action. The longer the drawbar, with pivot centers at, or near, the rear driver and the front tender truck bolster, the less this action will be. It is seldom feasible in most models to adjust this geometry enough to remove all of the skew that may occur.

Buffers are used in the prototype to reduce the skewing ~~tendency, but~~ tendency but are also seldom seen in model locomotives. An aesthetic simulation of these buffers has been the use of dark foam plastic between the end sills of the locomotive cab and the tender, but these can be counted on to serve only a small part of the prototype buffer action.

The layout of the tender end of the drawbar, presented in Figure 1, includes two optional mounting hole positions for the tender drawbar pin. The shorter distance hole provides the model railroader with a choice intended to allow more narrow and prototypical clearance between the locomotive and tender when track radii on the layout are sufficiently large. The longer hole position is intended to reduce the risk of interference by increasing the clearance between the locomotive and the tender. It is acceptable to achieve this optional spacing by providing two drawbars each with a single hole that matches one of the two mounting distances, instead of a single drawbar with two holes.

2.1 Metal Drawbars

The materials used for metal drawbars should have electrical conductivity. Brass (nickel plated to reduce oxidation when feasible) and nickel-silver are acceptable for their conductivity. The dimensions for metal drawbars are shown in Figure 1 and presented in Table 1 for specific scales. The dimensions for drawbars used in other scales ~~have~~ not yet been specified.

Metal drawbars often include an attached spring wire that serves two purposes: enhance electrical conductivity, and enhance drawbar captivity, as discussed below. The spring wire is often attached by soldering near the locomotive end of the drawbar. It is installed on the underside of the drawbar, as shown in Figure 3. This ensures the tender pin is inserted in the drawbar without interference from the spring wire. The spring wire material is therefore usually plated steel wire or brass. The spring wire is shown in Figure 1 and dimensions for the spring wire are given in Table 1.

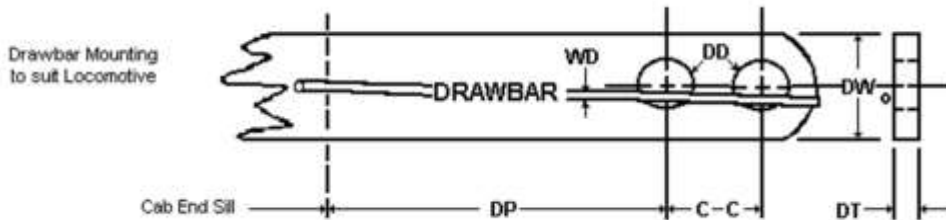


Figure 1. Metal drawbar layout.

2.2 Plastic Drawbars

Plastic drawbars are an acceptable means of providing the pivoting mechanical interconnection between the locomotive and the tender. The design of the drawbar must provide enough tensile and compression strength to withstand the repeated pull and push forces associated with interconnecting operating model locomotives and tenders in the desired scale. The annular dimensions at the ends of the drawbar, where holes are typically present to allow for attachments, are particularly sensitive to tensile forces. At this time, no dimensions are specified in this RP for plastic drawbars.

2.3 Drawbar Captivity

Drawbars must remain attached to both the locomotive and the tender during all operational phases regardless of whether tensile forces, compression forces, or no forces at all are present in the drawbar. To the extent that drawbars are considered permanently attached to the locomotive this issue may be addressed for the locomotive end of the drawbar. However, at the tender end, the issue of captivity must be addressed. Traditionally, metal drawbars have attached to tenders using simple metal pins that protrude downward from the front-underside of the tender, as shown in Figure 2.

When tenders employ a simple downward protruding pin for attachment, any drawbar that uses an attached spring wires may provide the necessary captivity. The wire typically applies force against

Commented [BK5]: All the drawings are cut and pasted from the 1997 RP. Once I get feedback on what needs to change, I will redraw them in Google Drawings.

Commented [BK6R5]: This was my idea but since there have been no complaints about the old drawings, I am not sure we need to spend time revising them now.

the tender drawbar pin and this force may create enough friction to keep the weight of the drawbar from falling off the pin. The spring wire is common on metal drawbars, but can also be implemented on plastic drawbars for both mechanical and electrical purposes. If a drawbar spring wire is not employed when a simple tender pin is used, then another method must be used for captivity. One alternative method is to limit vertical motion of the drawbar at the locomotive attachment point. This restriction prevents the drawbar from falling off the tender pin or sliding down it when the locomotive backs down on the tender.

Other attachment methods that can enhance captivity, as discussed below, include metal or plastic screws that attach to the tender floor but permit drawbar rotation and also capped plastic pins that friction fit in the tender floor but also permit rotation.

Where ever possible, an attachment method at the tender that remains captive when the locomotive and tender are removed from the layout is preferred. Although it is ~~recognized~~ recognized that some storage methods require separating the locomotive and tender, during normal operations in and around a model railroad, relocating a locomotive and tender is usually expedited by having the drawbar remain captive at both ends.

Drawbar captivity is often of particular concern with DCC equipped locomotives. The multi-conductor connections that are often employed between the locomotive and tender can be damaged if the drawbar detaches. Many DCC multi-conductor connections on smaller scales are permanent and are particularly vulnerable to detached drawbars.

Table 1. Metal drawbar dimensions in inches and (millimeters).

Scale	Height DH	Width DW	Thickness DT	Hole Diameter DD	Hole Centers CC	Wire Diameter WD
O/On3	Not Specified					
S/Sn3	Not Specified					
HO	0.312 (7.925)	0.172 (4.375)	0.040 (1.025)	0.082 (2.075) #45 drill	0.156 (3.975)	0.022 (0.550)
HOn3	<u>0.254</u> <u>(6.500)</u>	<u>0.149</u> <u>(3.750)</u>	<u>0.040</u> <u>(1.000)</u>	<u>0.085</u> <u>(2.125)</u>	<u>0.090</u> <u>(2.250)</u>	<u>0.015</u> <u>(0.375)</u>
HOn30	Not Specified					
TT	0.266 (6.750)	0.125 (3.175)	0.032 (0.825)	0.067 (1.700) #51 drill	0.125 (3.175)	0.022 (0.550)
TTn3	.219 (5.550)	0.125 (3.175)	0.032 (0.825)	0.067 (1.700) #51 drill	0.125 (3.175)	0.022 (0.550)
N	Not Specified					
Z	Not Specified					

2.4 Drawbar Locomotive Weighting

Using the drawbar to transfer tender weight to the locomotive is not recommended. While it may be possible to transfer weight to the rear locomotive drivers by creating a downward force on the drawbar at the locomotive end, the forces involved can compromise the drawbar's ability to rotate properly and may exacerbate the skewing phenomenon discussed above. In addition, tender truck tracking may also be compromised if tender weight is transferred from the front truck to the drawbar.

3 Traditional Drawbar Attachments

Specifications are provided below for metal attachment pins intended for use with metal drawbars, but only for specific scales. It is recognized that other attachment methods are available and they are discussed below. However, no additional specifications have been developed for these alternative attachment methods at this time.

3.1 Metal Attachments

The traditional attachment method for metal drawbars attaching to metal tenders has been the simple protruding metal pin shown in Figure 2. The materials used for metal pins should have electrical conductivity. Brass (nickel plated to reduce oxidation when feasible) and nickel-silver are acceptable for their conductivity. The dimensions for metal pins are shown in Figure 2 and presented in Table 2 for specific scales. The dimensions for metal pins used in other scales has not yet been specified. The recommended pin includes a hex nut flange that can be used to tighten the pin when a threaded installation is employed. The metal pin should be mounted to the tender floor so as to clear the railhead by the amount specified in Table 2 and setback from the tender end sill by the amount specified below in Section 4. Mounting of the metal pin may be threaded or soldered in place, to be in conductive connection to the tender frame if needed. If the tender floor height varies from that shown in Section 4, Pin length should be modified to suit.

An alternative metal attachment method that can be considered is to attach a drawbar to the tender with a metal screw or bolt. Machine or sheet-metal style screw or bolt options are acceptable. To reduce the chance of the drawbar binding with the threads of the screw or bolt, a protective, and conductive, thin-wall metal tube may be necessary. Regardless of the solution, drawbar rotation must be maintained and conductivity requirements may need to be considered. There are no recommended dimensions for this alternative metal attachment method at this time.

With tender drive or tender equipped motors that use the drawbar for conductivity, the attachment method may include electrical insulation from the tender frame. See Section 5 below.

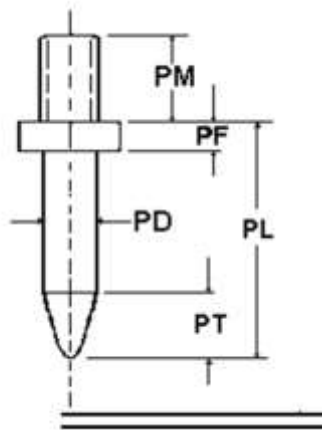


Figure 2. Metal attachment pin layout.

Table 2. Metal attachment pin dimensions in inches and (millimeters).

Scale	Clearance PC	Diameter PD	Length PL	Taper PT	Flange PF	Mounting PM
O/On3	Not Specified					
S/Sn3	Not Specified					
HO	0.094 (2.375)	0.078 (1.975)	0.344 (8.725)	0.094 (2.375)	5/32 hex nut, 0.047 (1.200) thick	2-56 thread, 0.047 (1.200) <u>0.125</u> <u>(3.175)</u> long
HOn3	<u>0.083</u> <u>(2.125)</u>	<u>0.080</u> <u>(2.000)</u>	<u>0.239</u> <u>(6.000)</u>	<u>0.034</u> <u>(0.875)</u>	<u>0.072</u> <u>(1.875)</u>	<u>0.081</u> <u>(2.000)</u>
HOn30	Not Specified					
TT	0.078 (1.975)	0.062 (1.575)	0.281 (7.150)	0.062 (1.575)	7/64 hex nut, 0.047 (1.200) thick	1-72 thread, 0.062 (1.575) long
TTn3	0.078 (1.975)	0.062 (1.575)	0.203 (5.150)	0.062 (1.575)	7/64 hex nut, 0.047 (1.200) thick	1-72 thread, 0.062 (1.575) long
N	Not Specified					
Z	Not Specified					

Commented [BK7]: This dimension is 3/64" (0.046875") in the 1997 RP. This seems awful short to me. It is less than the 1/16 length for TT below.

Commented [BK8R7]: I am increasing this dimension to 1/8" to provide enough height to secure the pin in the bottom plate of a tender. The new height will provide 7 threads if the bottom plate is 1/8" thick. This pin must accept the torque of the engine pulling the entire train so the additional threads seem reasonable.

175 **3.2 Plastic Attachments**

Plastic attachment methods are an acceptable means of connecting the drawbar to the tender. Plastic pins, screws, or bolts may be used. The design of the attachment must provide enough shear strength to withstand the repeated pull and push forces associated with interconnecting operating model locomotives and tenders in the desired scale. At this time, no dimensions are specified in this RP for plastic attachment methods.

180 **4 Traditional Drawbar and Attachment Relationship**

The overall drawbar and attachment relationship when a metal drawbar and metal pin are used is shown in Figure 3 with dimensions given in Table 3. At this time, no dimensions are specified in this RP for the relationships involving plastic drawbars or other attachment methods.

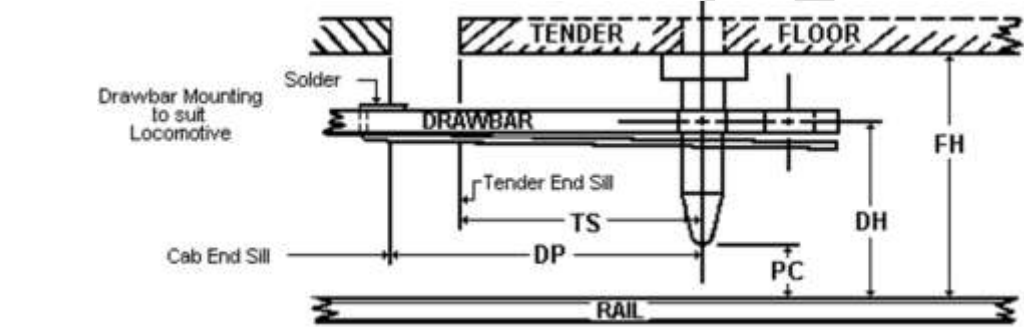


Figure 3. Drawbar and attachment relationships.

Table 3. Drawbar and attachment relationship dimensions in inches and (millimeters)

Scale	Floor Height FH	Tender Attachment Setback			Drawbar Projection		
		4-wheel TS-4	6-wheel TS-6	Centipede TS-Cent	4-wheel DP-4	6-wheel DP-6	Centipede DP-Cent
O/On3		Not Specified					
S/Sn3		Not Specified					
HO	0.437 (11.125)	0.250 (6.350)	0.375 (9.525)	0.500 (12.700)	0.375 (9.525)	0.500 (12.700)	0.625 (15.875)
HOn3	0.415 (11.375)	0.151 (3.875)			0.350 (8.875)		
HOn30		Not Specified					
TT	0.359 (9.125)	0.187 (4.775)	0.281 (7.150)	0.375 (9.525)	0.281 (7.150)	0.375 (9.525)	0.469 (11.900)
TTn3	0.281 (7.150)	0.187 (4.775)	0.281 (7.150)	0.375 (9.525)	0.281 (7.150)	0.375 (9.525)	0.469 (11.900)

N	Not Specified
Z	Not Specified

5 Performance-Based Drawbar Designs

Intro text-why performance based. Connect to RP-11. Mention extending drawbars applications to assist with married pairs of locomotives (A/B units for instance) or inter-urban married pair cars.

There are several aspects of drawbar performance that can sometimes benefit from allowing designers to have the freedom to deviate from the foundational recommended practices, stated above. For instance, if the goal for a locomotive design is to mimic prototype locomotive movement when backing down, then the recommended practices presented above for drawbar length and hole placement, as well as tender drawbar pin placement may not be harmonious with that goal. As a second example, consider a small-scale locomotive design where it is desired to implement a drawbar that carries two electrical circuits internally for interconnection between the locomotive and tender. A third example might be a small-scale prototype tender design that may not be able to support a tender drawbar pin that is not integrated with the front tender truck.

In all of these cases if the designer wants the freedom to deviate from the above recommended practices to support a desired level of performance in their design, it is considered acceptable to do so.

5.6 Electrical Considerations

The drawbar can be used to conduct electricity between the locomotive and the tender. Traditionally, ~~in~~with locomotive equipped motors, when metal drawbars are used to conduct electricity, the metal drawbars are electrically connected to the tender frame and insulated from the locomotive frame. In this configuration the tender trucks, with one side insulated, provide conductivity to one rail, through the tender frame, to the drawbar. The locomotive drivers, also with one side insulated, provide conductivity to the other rail and thus to the locomotive frame.

However, the contemporary method that is considered the best practice for providing conductivity to a model steam locomotive is to receive power from all the locomotive driver wheels and from all tender wheels. In such a configuration a conductive drawbar is not used, in favor of a wired interface between the tender and locomotive that provides the needed conductivity.

With tender drive or tender equipped motors, when a metal drawbar does conducts electricity, the drawbar insulation is usually at the tender end.

Especially when retrofitting DCC or re-motoring a DC locomotive, the electrical conductivity of a metal drawbar must be given careful consideration before its conductivity is decommissioned or repurposed.

5.46.1 DC Operation

In DC operations, as just presented, a metal drawbar can provide electrical conductivity between one rail and the motor. If the motor is in the locomotive, the drawbar brings electricity from one rail, usually through the tender frame, then through an insulated locomotive connection, to one terminal of the motor. If the motor is in the tender, the drawbar brings electricity from the locomotive, often the locomotive frame, and then through an insulated tender connection, to one terminal of the motor.

© 1997 – 2025 National Model Railroad Association, Inc.

RP-37 Draft Locomotive and Tender Drawbars

Page 9 of 12 – ~~Jul 17, 2025~~ Aug 21, 2026

Commented [Ma9]: Do we need to consider changing this to best practices where all wheel pickup is used and wheels are insulated from the frame both on the locomotive and tender?

Commented [BK10R9]: Draft change has been made for R2.

230 Metal drawbars do not always carry electricity. If they do not, care must be taken to ensure the metal drawbar does not cause a short circuit between the frames of the tender and the locomotive since one or both frames may be electrically conductive in powering the motor.

If plastic drawbars are used, there are no electrical considerations for the drawbar itself.

5.26.2 DCC Operation

235 Especially when retrofitting Digital Command Control (DCC) in a locomotive, but also in new designs, the conductivity of a metal drawbar must be given careful consideration. It is necessary to electrically insulate the terminals of a DCC motor from the track circuits. This means the mounting method of an existing motor that has one terminal electrically connected to the frame (locomotive or tender) must be modified to insulate the terminal. This change may mean the electrical conductivity of the drawbar must be reconsidered. In addition, DCC installations often include multi-conductor connections between the locomotive and tender that carry all necessary circuits. If the electrical conductivity of a metal drawbar is not needed its electrical configuration, e.g., which end if any is insulated, may need to be reconsidered.

240 If plastic drawbars are used, there are no electrical considerations for the drawbar itself.

Commented [Ma11]: Do we need to propose a standard on this similar to S-9.1.1 or since the tender and locomotive are manufactured by one company, leave it to them how many pins and configuration?

Commented [BK12R11]: Discussed during the 10/16/25 meeting. There is interest in a standardized connector. Should we use a connector series that can increase in wire size as model railroad scale increases? Electrical current will need to be considered for sizing connectors. For instance...For G scale, carrying 5A would require 20AWG. For N gauge, perhaps 1A would require 26 AWG. HO and O scale 2A so 24AWG??

67 Document History

Date	Description
March 1997	RP-37 and RP-37.1 last published.
17 July 2025 August 2026	RP-37 and RP-37.1 combined and expanded to include plastic drawbars and DCC considerations. Converted all imperial fractional dimensions to new accuracy and tolerance ranges in both imperial and metric decimal units.

245

Important Notices and Disclaimers Concerning NMRA Standards Documents

The Standards (S), Recommended Practices (RP), Technical Note (TN), and Technical Information (TI) documents of the National Model Railroad Association ("NMRA Standards documents") are made available for use subject to important notices and legal disclaimers. These notices and disclaimers, or a reference to this page, appear in all standards and may be found under the heading "Important Notices and Disclaimers Concerning NMRA Standards Documents."

Notice and Disclaimer of Liability Concerning the Use of NMRA Standards Documents

NMRA Standards documents are developed within the Standards and Conformance Department of the NMRA in association with certain Working Groups, members, and representatives of manufacturers and sellers. NMRA develops its standards through a consensus development process, which brings together volunteers representing varied viewpoints and interests to achieve the final product. NMRA Standards documents are developed by volunteers with modeling, railroading, engineering, and industry-based expertise. Volunteers are not necessarily members of NMRA, and participate without compensation from NMRA.

NMRA does not warrant or represent the accuracy or completeness of the material contained in NMRA Standards documents, and expressly disclaims all warranties (express, implied and statutory) not included in this or any other document relating to the standard or recommended practice, including, but not limited to, the warranties of: merchantability; fitness for a particular purpose; non-infringement; and quality, accuracy, effectiveness, currency, or completeness of material. In addition, NMRA disclaims any and all conditions relating to results and workmanlike effort. In addition, NMRA does not warrant or represent that the use of the material contained in NMRA Standards documents is free from patent infringement. NMRA Standards documents are supplied "AS IS" and "WITH ALL FAULTS."

Use of NMRA Standards documents is wholly voluntary. The existence of an NMRA Standard or Recommended Practice does not imply that there are no other ways to produce, test, measure, purchase, market, or provide other goods and services related to the scope of the NMRA Standards documents. Furthermore, the viewpoint expressed at the time that NMRA approves or issues a Standard or Recommended Practice is subject to change brought about through developments in the state of the art and comments received from users of NMRA Standards documents.

In publishing and making its standards available, NMRA is not suggesting or rendering professional or other services for, or on behalf of, any person or entity, nor is NMRA undertaking to perform any duty owed by any other person or entity to another. Any person utilizing any NMRA Standards document, should rely upon their own independent judgment in the exercise of reasonable care in any given circumstances or, as appropriate, seek the advice of a competent professional in determining the appropriateness of a given NMRA Standards document.

IN NO EVENT SHALL NMRA BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO: THE NEED TO PROCURE SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE PUBLICATION, USE OF, OR RELIANCE UPON ANY STANDARD OR RECOMMENDED PRACTICE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE AND REGARDLESS OF WHETHER SUCH DAMAGE WAS FORESEEABLE.

Translations

NMRA's development of NMRA Standards documents involves the review of documents in English only. In the event that an NMRA Standards document is translated, only the English version published by NMRA is the approved NMRA Standards document.

Official Statements

A statement, written or oral, that is not processed in accordance with NMRA policies for distribution of NMRA communications, or approved by the Board of Directors, an officer or committee chairperson, shall not be considered or inferred to be the official position of NMRA or any of its committees and shall not be considered to be, nor be relied upon as, a formal position of NMRA.

Comments on Standards

Comments for revision of NMRA Standards documents are welcome from any interested party, regardless of membership. However, **NMRA does not provide interpretations, consulting information, or advice pertaining to NMRA Standards documents.**

Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate supporting comments. Since NMRA standards represent a consensus of concerned interests, it is important that any responses to comments and questions also receive the concurrence of a balance of interests. For this reason, NMRA, its departments, Working Groups or committees cannot provide an instant response to comments, or questions except in those cases where the matter has previously been addressed. For the same reason, NMRA does not respond to interpretation requests. Any person who would like to participate in evaluating comments or in revisions to NMRA Standards documents may request participation in the relevant NMRA working group.

Laws & Regulations

Users of NMRA Standards documents should consult all applicable laws and regulations. Compliance with the provisions of any NMRA Standards document does not constitute compliance to any applicable regulatory requirements. Implementers of the standard are responsible for observing or referring to the applicable regulatory requirements. NMRA does not, by the publication of NMRA Standards documents, intend to urge action that is not in compliance with applicable laws, and NMRA Standards documents may not be construed as doing so.

Copyrights

NMRA Standards documents are copyrighted by NMRA under US and international copyright laws. They are made available by NMRA and are adopted for a wide variety of both public and private uses. These include both use, by reference, in laws and regulations, and use in private self-regulation, standardization, and the promotion of modeling, structural and engineering practices and methods. By making NMRA Standards documents available for use and adoption by public authorities and private users, NMRA does not waive any rights in copyright to the NMRA Standards documents.

IMPORTANT NOTICE

NMRA Standards documents do not guarantee or ensure safety, security, health, or environmental protection, or ensure against interference with or from other systems, devices or networks. NMRA Standards documents development activities consider research and information presented to the standards development group in developing any safety recommendations. Other information about safety practices, changes in technology or technology implementation, or impact by peripheral systems also may be pertinent to safety considerations during implementation of the standard. Implementers and users of NMRA Standards documents are responsible for determining and complying with all appropriate safety, security, environmental, health, and interference protection practices and all applicable laws and regulations.